



# Erasing the Encryption Keys for the Motorola APX7500 O5 Series Mobile Radio

This feature allows you to erase all or selected encryption keys on the APX series mobile radios. Once the keys are erased the encryption feature will be disabled in the radio. The encryption can be restored to the radio by using a 'KEY LOADER' to reload new key codes.


1. Press and hold the **Menu Select** button directly below the '**SEC Button**' (approximately two seconds) until a tone is heard from the speaker and '**ERAS**' appears in the **Menu Select** field.

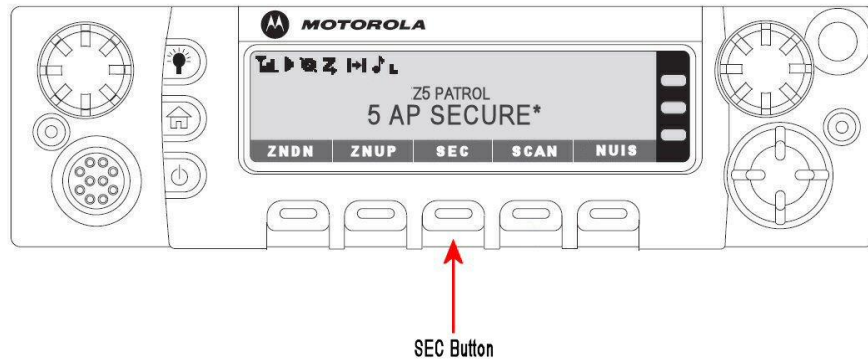


2. Press the **Menu Select** button directly below the '**ERAS Button**'

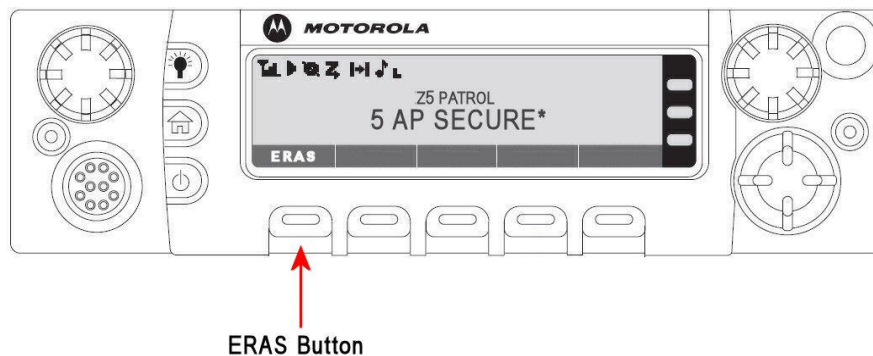


3. Press the **Menu Select** button directly below '**ALL Button**' to delete all keys **OR** the '**SNGL Button**' to delete current shown key. Press the **Menu Select** button directly below the '**ABRT Button**' to abort this screen and return to Home screen.

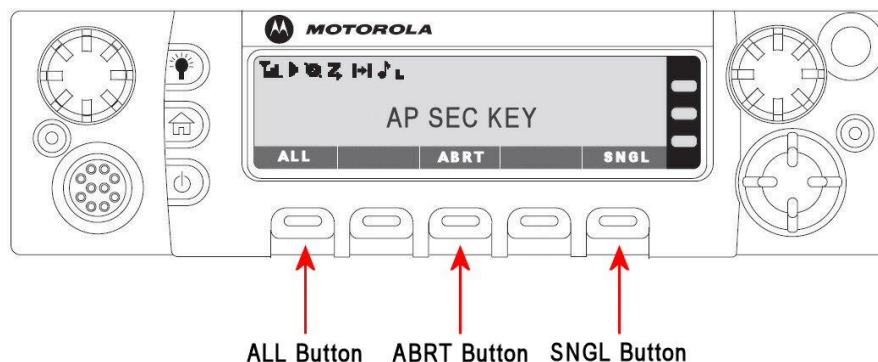

4. If you chose the **Menu Select** button directly below **'ALL Button'** to delete all keys **OR** the **'SNGL Button'** to delete current shown key you will be asked to confirm the request. Select **'YES'** to erase the key(s) or **'NO'** to cancel the request.

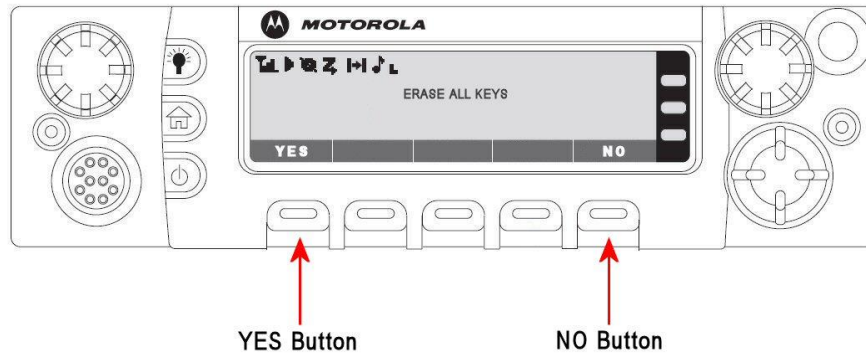

5. If **'YES'** was chosen **'ERASED KEY'** will appear on the screen.

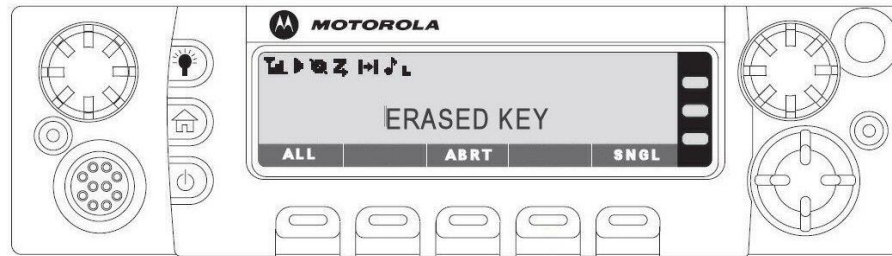

6. Once you have completed the request press the **'HOME'** Button to return to the main screen.

