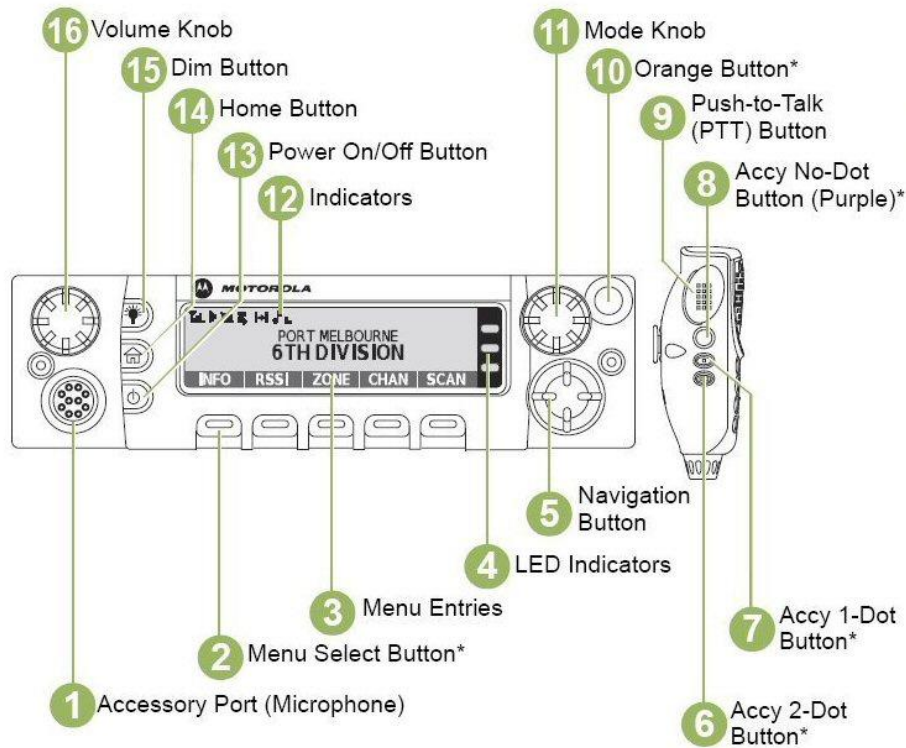

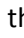 




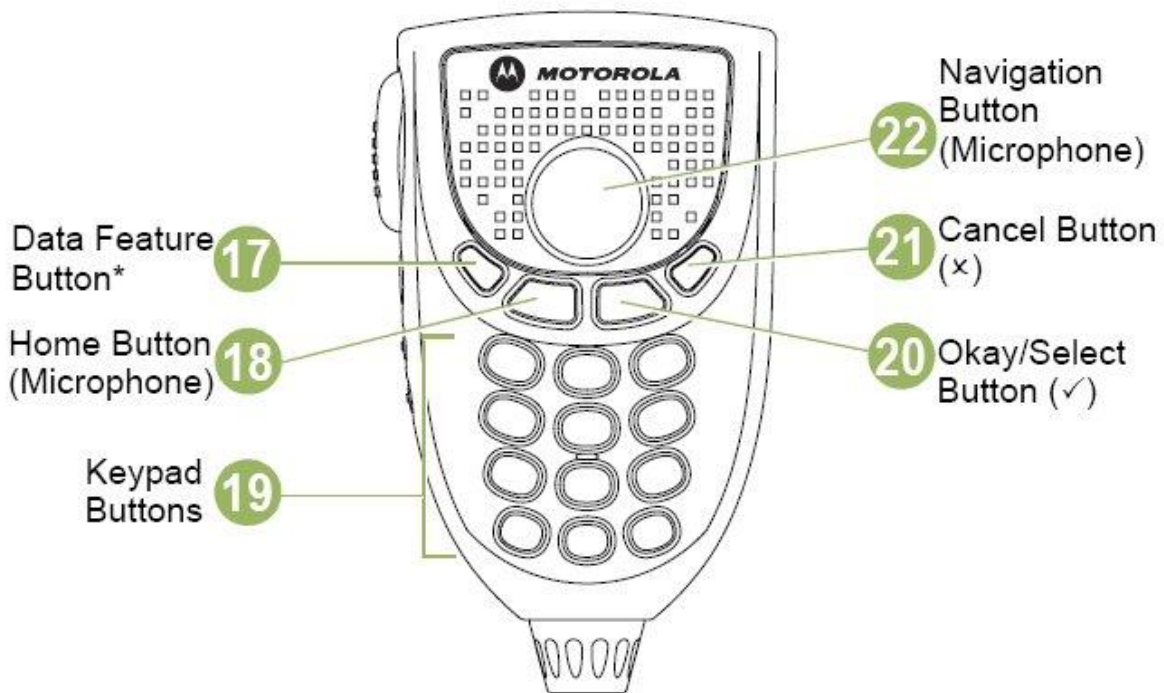
Identifying Radio Controls for the Motorola APX7500 O5 Series Mobile Radio

O5 Control Head and Microphone







*These controls/buttons are programmable.

#	Feature/Control	Item Description
1	Accessory Port (Microphone)	Used to connect accessories, such as the microphone, to the control head.
2	Menu Select Buttons	The Menu Select Buttons allow accessing the menu entries programmed in the radio.
3	Menu Entries	The Menu Entries are displayed above the Menu Select Buttons. This identifies the feature that is programmed for that particular button.
4	LED Indicators	LED indicator shows the operational status of your radio. <ul style="list-style-type: none"> • Solid red – Radio is transmitting. • Rapidly blinking red – Radio has failed the self-test upon powering up or encountered a fatal error. • Solid yellow – Channel is busy. • Blinking yellow – Radio is receiving a secured transmission. • Solid green – Radio is powering up, or is on a non-priority channel while in the Scan List Programming mode. • Blinking green – Radio is receiving an individual or telephone call, or is on a Priority-Two channel while in the Scan List Programming mode. • Rapidly blinking green – Radio is on a Priority-One channel while in the Scan List Programming mode.
5	4-Way Navigation Button	Use this button to scroll up, down, left or right. Press and release one of the buttons to scroll from one entry to the next one. Press and hold one of the buttons to have the radio toggles through the list automatically (release the button to stop).
6	Accessory 2-Dot Button	Enters a menu feature with a short press on the preprogrammed One Touch button.
7	Accessory 1-Dot Button	Enters a menu feature with a short press on the preprogrammed One Touch button.
8	Accessory No-Dot Button (Purple)	Enters a menu feature with a short press on the preprogrammed One Touch button.
9	Push-to-Talk (PTT) Button	Press and hold down PTT button to talk. Release the PTT button to listen.
10	Orange Button	The Orange button is generally preprogrammed to send an emergency signal.
11	Mode Knob	Use the Mode Knob to scroll through the channels by turning it clockwise or counterclockwise.
12	Indicators	The radio display uses icons to indicate its operational status.
13	Power On/Off Button	Press the Power On/Off button to toggle the power on or off.
14	Home Button	The  button returns you to the home (default) display. In most cases, this is the current mode. For selected radio features, the  button is also used to save user-edited radio settings or information before returning you to the Home screen. The  button also can revert to home channel. Check with your system administrator for more information. Note: Some features do not require you to press  to go to the Home screen.
15	Dim Button	Press the DIM button to toggle the backlight off or on.
16	Volume Knob	Use the Volume Knob to adjust the volume of the speakers by turning it clockwise or counterclockwise.



*This button is programmable.

Note: The microphone is not part of a radio. It is an optional accessory.

#	Feature/Control	Item Description
17	Data Feature Button	Use this button to access data-related features, such as the Text Messaging Service (TMS) feature screen. (Currently not available)
18	Home Button (Microphone)	The  button returns you to the home (default) display. In most cases, this is the current mode. For selected radio features, the  button is also used to save user-edited radio settings or information before returning you to the Home screen. The  button also can revert to home channel. Check with your system administrator for more information. Note: Some features do not require you to press  to go to the Home screen.
19	Keypad Buttons	The 3 x 4 alphanumeric keypad on the keypad microphone is used to access your radio's features. The keypad functions in a manner similar to a standard telephone keypad when entering numeric digits. When the keypad is used to edit a list, each key can generate different characters of the alphabet.
20	Okay/Select Button	Use this button to select the desired command or function.
21	Cancel Button	Use this button to cancel the selected command or function.
22	Navigation Button (Microphone)	Use this button to scroll up, down, left or right. Press and release one of the buttons to scroll from one entry to the next one. Press and hold one of the buttons to have the radio toggles through the list automatically (release the button to stop).